

CADWELD® “PLUS ONE SHOT” INSTALLATION INSTRUCTIONS


- 1.** Clean copper wire and ground rod with mild abrasive



- 2.** Place body over the ground rod and insert wire into metal barrel



- 3.** Connect the Battery Pack plug into the PLUS ONE SHOT electrode

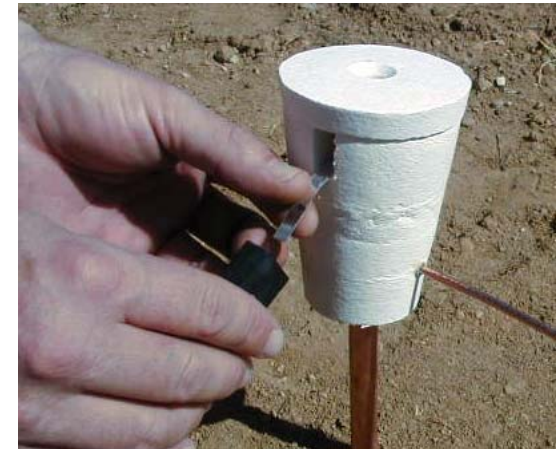

- 4.** Move a safe distance away from the ground rod location . Press and hold the OPERATE button until you see smoke coming out the top of the One-Sot. Let go of the button.



- 5.** Allow to cool. Unplug the battery pack from the PLUS ONE SHOT . Break the mold by tapping it, and yank on the wire to make sure you made a good connection

